



- 31. Nut
- 32. Equalizer
- 33. Connector

PARKING BRAKE ADJUSTMENT

The parking brakes must be adjusted whenever the parking brake cables have been replaced or disconnected. Also if the brake holding ability is not adequate. Before adjusting the parking brakes check the condition of the service brakes. The service brakes must be adjusted properly before proceeding with the parking brake adjustment.

CABLE INSPECTION

Check the parking brake system for free operation. The brake lever must return to the released position without sticking or binding. If a problem is present check the cable routings for kinks or binding. Clean and lubricate the parking brake assembly and cables with Delco brake lube or equivalent.

FOOT PEDAL TYPE

1. Block the front wheels.
 - Raise and support the rear axle with suitable safety stands.
2. Loosen the equalizer nut.
3. Set the parking brake pedal to four clicks.



Adjust

- Equalizer nut until the wheels rotate forward with a moderate drag.
4. Release the parking brake and rotate the rear wheels. There should be no brake drag.
 5. Remove the safety stands and lower the vehicle.
 6. Unblock the front wheels.