

## SECTION 1A

## HEATER AND AIR CONDITIONING

## CONTENTS OF THIS SECTION

Standard Heater .....	1A-1
Auxiliary Heater .....	1A-15
Air Conditioning .....	1A-19

## STANDARD HEATER

## INDEX

General Description .....	1A-1	Center Distributor Duct - G Models .....	1A-6
Theory of Operation .....	1A-4	Left Distributor Duct - G Models .....	1A-7
System Components .....	1A-4	Defroster Duct .....	1A-7
System Controls .....	1A-4	Control Assembly .....	1A-8
Component Replacement and Repair .....	1A-5	Control Cables .....	1A-8
Blower Motor .....	1A-5	Blower Switch .....	1A-10
Heater Distributor and Core Assembly .....	1A-5	Resistor Unit .....	1A-10
Heater Hoses .....	1A-6	Diagnosis .....	1A-11

## GENERAL DESCRIPTION

Heating components are attached to the dash panel on the right side of the vehicle. The blower and air inlet assembly and water hoses are located on the forward side of the dash panel while the heater core and distributor duct are on the passenger side.

The heater system is an air mix type system in which outside air is heated and then mixed in varying amounts with cooler outside air to attain the desired air temperature. The system consists basically of three parts: (1) the blower and air inlet assembly, (2) the heater distributor assembly and (3) the heater control assembly.